







KIC Explorer Furnace Temperature Tester 7CH -150C to 1050C

Basic Information

Place of Origin: AmericaBrand Name: KIC

Model Number: KIC Explorer 7CH

• Minimum Order Quantity: 1 PCS

• Price: USD+negotiable+pcs

Packaging Details: 50*40*10cm
Delivery Time: 1-7 days
Payment Terms: T/T

Supply Ability: 1+pcs+per days



Product Specification

• Accuracy: +/-1.2• Resolution: $0.3 \sim 0.1$ • Internal Operating $0 \sim 105$

Temperature:

• Applicable Thermocouple: Type K Thermocouple

• Measuring Temperature -150 ~ 1050

Range:

System Compatibility: Compatible With All PCS
Power Requirements: 1.5 Volt Alkaline Battery
Size: L 320* W 86* H 34(MM)

Heat Shield: Standard Stainless Steel Heat Shield

Condition: Original New/Used Original

Highlight: 7CH Furnace Temperature Tester,
Original KIC Explorer Furnace Temperature

Tester

, 1050 C Furnace Temperature Tester

Original KIC Explorer Furnace Temperature Tester 7CH for Measuring temperature range -150°C to 1050°C

Product Specifications

Attribute	Value
Accuracy	±1.2°C
Resolution	0.3°C ~ 0.1°C
Internal operating temperature	0°C ~ 105°C
Applicable thermocouple	Type K thermocouple
Measuring temperature range	-150°C ~ 1050°C
System compatibility	Compatible with all PCS
Power requirements	1.5 volt alkaline battery
Size	L 320 × W 86 × H 34 (MM)
Heat shield	Standard stainless steel heat shield
Condition	Original New/Used Original

Key Features

Automatic thermocouple position setting import

Temperature curve evaluation automation

Automatic visual operation instructions

Overheat and low battery protection with automatic test termination

Automatic data retrieval ensures temperature curve integrity

Automatic production process stability confirmation

Improved analysis accuracy and stability for more precise test data

Stainless steel heat insulation sleeve protects instrument from external damage

Important Usage Notes

Verify battery power is sufficient and surface temperature doesn't exceed 40°C for accurate testing

Confirm thermocouple detects and collects constant temperature before proceeding to next test

Insulated box with stands maximum 280°C for 9 minutes - ensure internal temperature doesn't exceed 85°C minutes - ensure internal temperature exceed 85°C minutes - ensure internal temperature exceed 85°C minutes - ensure internal temperature exceed 85°C minutes - ensure exceed 85°C minutes - ensure excee

Remove battery during long storage periods; keep battery below 60°C during use

Always cover heat insulation box after furnace use and seal with yellow heat insulation cotton

Connect only one furnace temperature tester to computer at a time

Allow heat insulation box to cool completely between furnace uses





+8613728696610

liyi@gs-smt.com smtmachine-spareparts.com

Room F3B-016, B Block, Hao Yun Lai Bussiness Building, Liutang road , Bao'an District , Shenzhen, China