







SMT Loading Unloading Rack 355x320x563mm with 5 Side Panels

Basic Information

Place of Origin: ChinaBrand Name: GS

Model Number: GS355320563

• Minimum Order Quantity: 1 PCS

Price: USD+negotiable+pcs
Packaging Details: 350*150*600mm

Delivery Time: 1-7 daysPayment Terms: T/T

Supply Ability: 1+pcs+per days



Product Specification

Product Name: SMT Loading And Unloading Rack

Product Specifications: 355*320*563mm
 Adjustable Range: 355*(50 - 250)mm
 Reference Positions: A 34mm, B 34mm

Product Material:
 PP Side Panel. Galvanized Upper And Lower

Base Plates

Side Panel Slot Width: 5mm
Side Panel Slot Width: 5mm
Side Panel Slot Depth: 3mm

Side Panel Structure: 5 Pieces Assembled
 Slot Spacing/Number Of 10mm / 50 PCS

Slots:

• Condition: New

• Highlight: 355*320*563mm SMT Loading Unloading Rack,

5 Pieces SMT Loading Rack


SMT Loading And Unloading Rack 355×320×563mm with 5 Pieces Assembled Side Panel Structure

Product Specifications

Attribute	Value		
Product Name	SMT Loading and Unloading Rack		
Product Specifications	355×320×563mm		
Adjustable Range	355×(50 - 250)mm		
Reference Positions	A 34mm, B 34mm		
Product Material	PP side panel. Galvanized upper and lower base plates		
Side Panel Slot Width	5mm		
Side Panel Slot Depth	3mm		
Side Panel Structure	5 pieces assembled		
Slot Spacing/Number of Slots	10mm / 50 PCS		
Condition	New		

Product Images



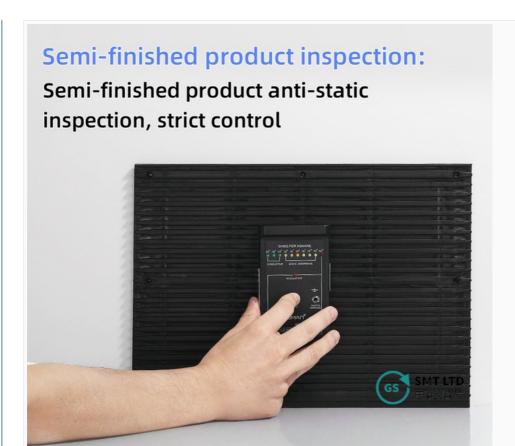


Whole board inspection:

Anti-static inspection, multiple local inspections of the whole board





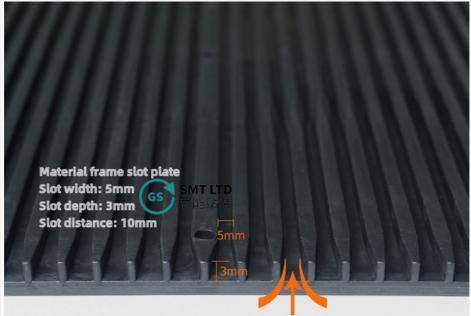

Excellent workmanship:


Precise size, excellent workmanship,
The arc-shaped wide-mouth design makes the
board placement smoother and easy to load

Non-standard customization					
(Can be flexibly produced and customized for various models and sizes)					
Product Name	specification	Storage of PCB board dimensions	Number of stored pieces	Adjustment method	
Anti-static loading and unloading rack	355*315*580mm	350x (50-250) mm	50PCS	Screw/Gear adjustment	
	355*320*563mm	350x (50-250) mm		Screw/Gear adjustment	
	460*400*563mm	460x (50-330) mm		Screw/Gear adjustment	
	535*460*570mm	535x (50-390) mm		Screw/Gear adjustment	
	535*530*570mm	535x (120-460) mm		Screw/Gear adjustment	
	630*530*570mm	630x (120-460) mm		Screw/Gear adjustment	
Anti-static aluminum alloy material rack	355*320*563mm	350x (50-250) mm	50PCS	Screw/Gear adjustment	
	460*400*563mm	460x (50-330) mm		Screw/Gear adjustment	
	535*460*570mm	535x (50-390) mm		Screw/Gear adjustment	
	535*530*570mm	535x (120-460) mm		Screw/Gear adjustment	
	630*530*570mm	630x (120-460) mm		Screw/Gear adjustment	
lote: The dimensions of the upper a			imum number of storage plates is 10		

Installation Guide

- 1. Take out the accessories and check if they are all present.
- 2. Press down the gear bar firmly.
- 3. Secure the four vertical columns with screws.
- 4. Align the side plates with the holes and tighten the screws.
- 5. Align the bottom of the movable side plate with the circular holes of the clips.
- 6. Install the base plate, push the round heads of the clips upwards and then move it.
- **7.** Install the stopper on the spring part downwards, and the installation is complete.


Additional Product Views

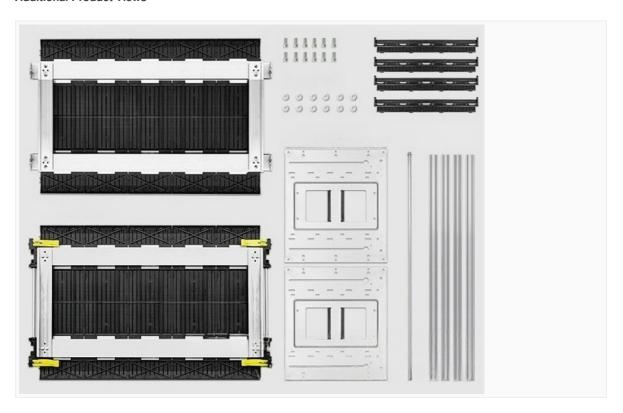





Factory strength

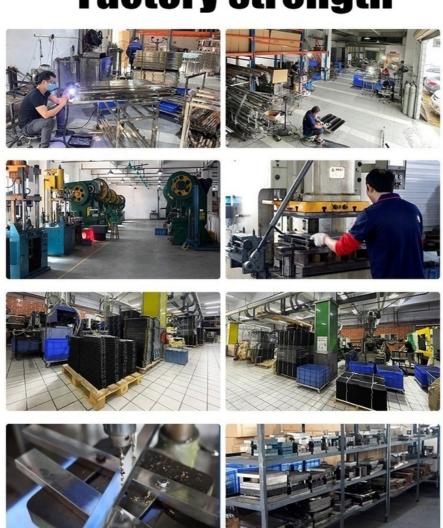

Actual inventory photos



Shipment Inspection Photos







+8613728696610





liyi@gs-smt.com smtmachine-spareparts.com

Room F3B-016, B Block, Hao Yun Lai Bussiness Building, Liutang road, Bao'an District, Shenzhen, China