



460*400*563mm SMT Loading And Unloading Rack and Adjustable Range 50-330mm for SMT Machines

Basic Information

Place of Origin: ChinaBrand Name: GS

Model Number: GS460400563

Minimum Order Quantity: 1 PCS

Price: USD+negotiable+pcs
Packaging Details: 500*150*600mm

Delivery Time: 1-7 daysPayment Terms: T/T

Supply Ability: 1+pcs+per days



Product Specification

Product Name: SMT Loading And Unloading Rack

Product Specifications: 460*400*563mm
Adjustable Range: 460*(50 - 330)mm
Reference Positions: A 34mm, B 34mm

Product Material:
PP Side Panel. Galvanized Upper And Lower

Base Plates

Side Panel Slot Width: 5mmSide Panel Slot Depth: 3mm

Side Panel Structure: 5 Pieces AssembledSlot Spacing/Number: 10mm / 50 PCS


• Condition: New

• Highlight: Adjustable SMT Loading Rack,

SMT Loading And Unloading Rack

Product Description



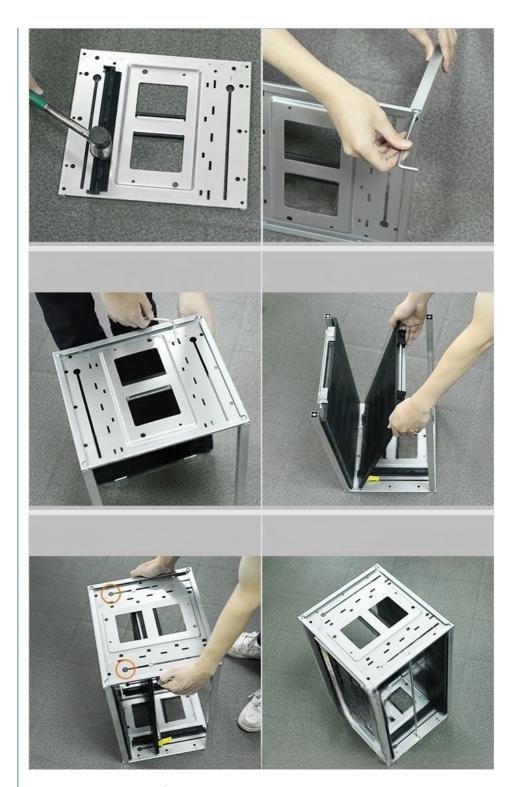

Product Installation Steps

- 1. Take out the accessories and check if they are all present.
- 2. Press down the gear bar firmly.
- 3. Secure the four vertical columns with screws.
- 4. Align the side plates with the holes and tighten the screws.
- 5. Align the bottom of the movable side plate with the circular holes of the clips.
- 6. Install the base plate, push the round heads of the clips upwards and then move it.
- 7. Install the stopper on the spring part downwards, and the installation is complete.









liyi@gs-smt.com



smtmachine-spareparts.com